

Single & Double Pedestal

Assembly and In-ground Installation


DIRECTIONS

1. Dig an 8" diameter hole to 6" below the frost line, considering the desired install height from grade.
2. Add gravel, tamp and verify installation height.
3. Wrap post with kraft paper or plastic sheet to protect from concrete spatter. Stabilize post in hole with wood braces and clamps. Add prepared concrete, verify level, plumb and installation height.
4. Remove braces and plastic sheeting after concrete is set. Clean exhibit with soap and water, backfill if desired.
5. Can use optional 6" long piece of rebar through hole at bottom of post to prevent post from pulling out of set concrete.

At installation height 32" from grade, 45° angle, standard 60" post length. Refer to your area's recommendations for specific below-grade installation requirements.

TOOLS REQUIRED

- | | |
|--------------------|--------------------------------|
| • Post hole digger | • Concrete |
| • Shovel | • Gravel |
| • Wood braces | • Soil |
| • Clamps | • Tamping stick for gravel |
| • Level | • Kraft paper or plastic sheet |
| • Tape Measure | |

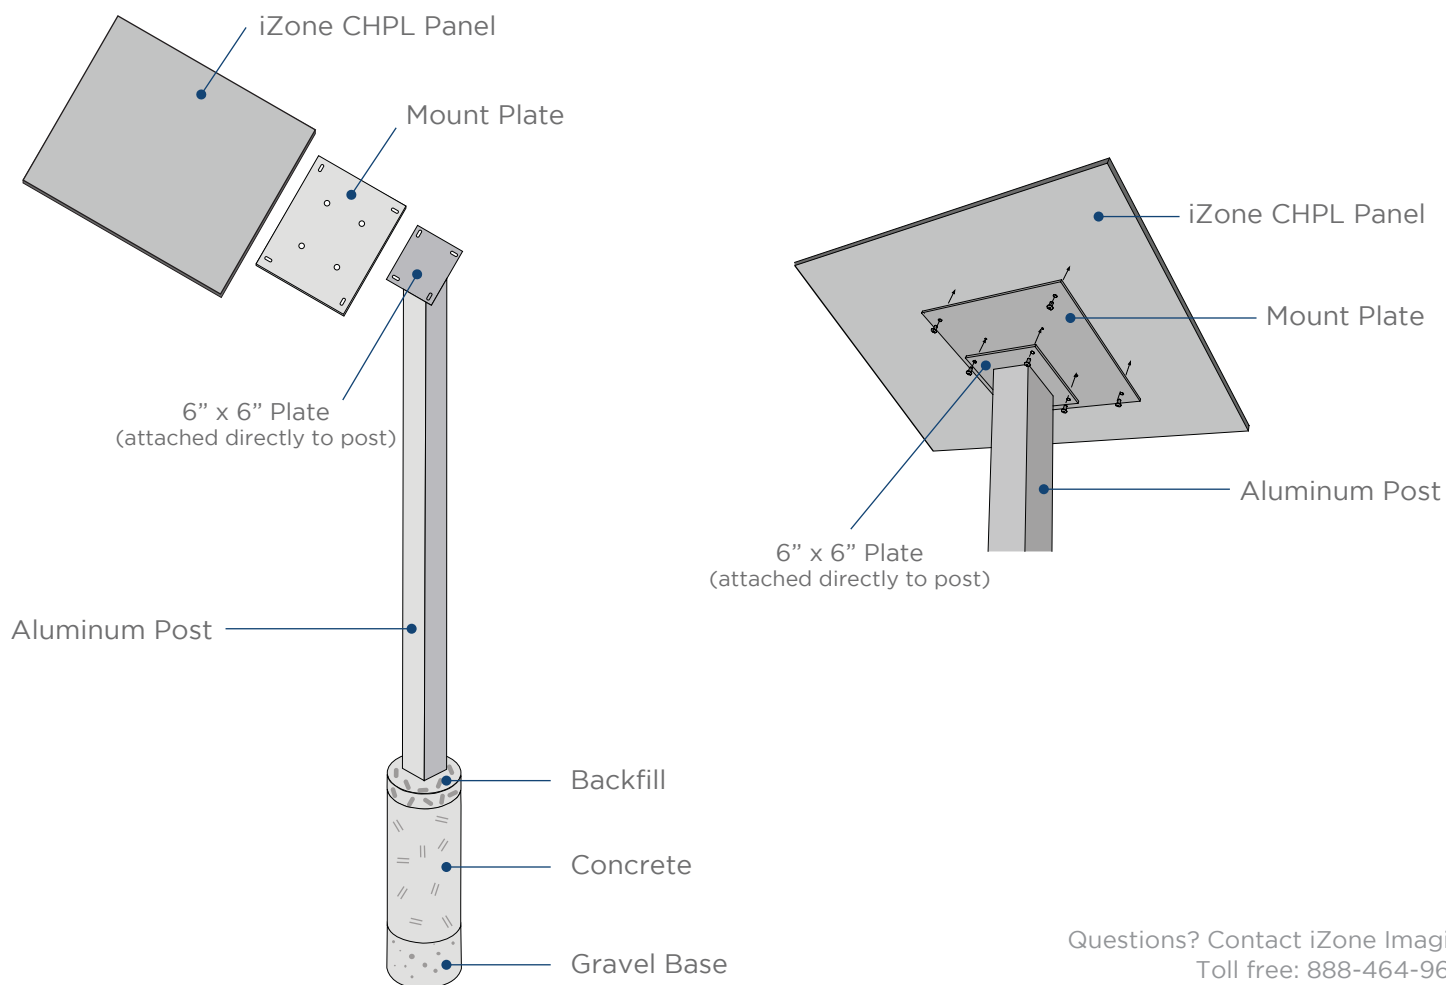

Questions? Contact iZone Imaging
Toll free: 888-464-9663